

SWIFT FIELD BUS MANUAL

ETHERNET/IP
PROFIBUS
PROFINET



Software version: ver.1.x12X

Revision: 31/07/2023

INDEX

1	Bus field options	1-1
1.1	Communication option ETHERNET/IP	1-1
1.1.1	Indicator configuration.....	1-1
1.1.2	PLC configuration	1-1
1.2	Communication option PROFIBUS	1-2
1.3	Communication option PROFINET	1-2
1.4	Configuration files.....	1-3
1.5	Communication format.....	1-3
1.5.1	Memory mapping	1-5

1 Bus field options


SWIFT indicator has two different field bus options.

- ETHERNET/IP
- PROFIBUS
- PROFINET

Both hardware options use the same memory map and the same mechanisms to accede to the indicator's data. This means that independently of the type of interface and cable used, the Master device (PLC) accedes to the information in the same way.

When the field bus is activated and there is no communication with the Master device (PLC) a "NO COM" message will appear blinking on the screen alternating with the weight.

1.1 Communication option ETHERNET/IP

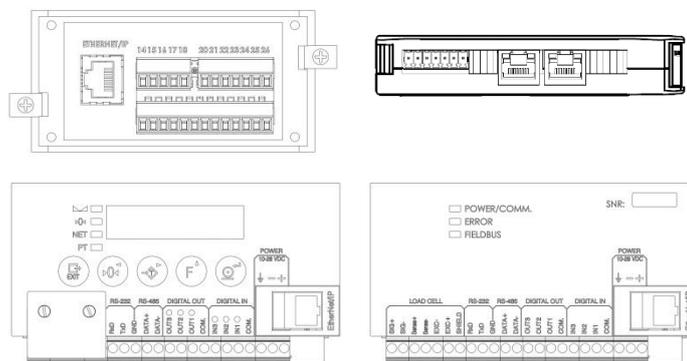

ETHERNET/IP connector in SWIFT Panel, SWIFT V, Rail and SWIFT COM

1.1.1 Indicator configuration

EtherNetIP option is configured in the **ETH_IP** section of the SWIFT's SETUP. In this menu, we have three submenus with the following parameters:

- **ACT IUE**: Selects whether to use the fieldbus (ON / OFF).
- **IP Con**: Set the IP address
- **Sn Con**: Configures the subnet mask.

For more information, see: "**SWIFT Operation and Configuration Manual**"

1.1.2 PLC configuration

To access into the two data areas (input / output), we will use the I / O data area of the EtherNetIP. This input / output zone is accessed with Class 1 (cyclic) messages. The Access properties to access to these two areas are as follows:

Address

Input area from the PLC side. These are the output data that the SWIFT "produces" ("produced data") to the PLC:

Class: 4 Instance: 100 Attribute: 3


Output area from the PLC side. These are the data that the PLC writes and the SWIFT "Consumes" ("consumed data"):

Class: 4 Instance: 150 Attribute: 3

Size

Both input and output areas have a size of 46 bytes (23 registers of 16 bits). Access to this memory can be done with implicit commands to have more speed and allow the communication in real time.

1.2 Communication option PROFIBUS

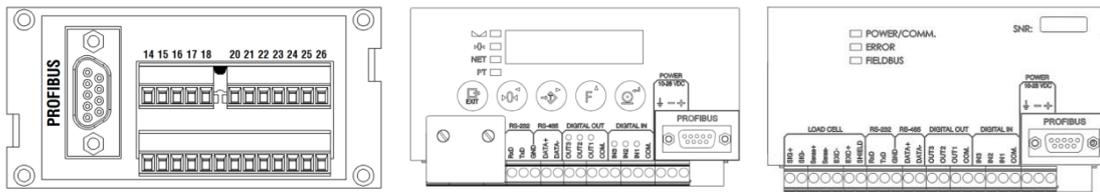


PROFIBUS connector in SWIFT Panel, Rail and SWIFT COM

It incorporates a PROFIBUS-DP interface working as a slave node to communicate with a PROFIBUS-DP Master device. It implements DP-V0 variant.

The identification of the different devices on a PROFIBUS network is made by the address. To see how to configure the address, see: “**SWIFT Operation and Configuration Manual**”.

1.3 Communication option PROFINET

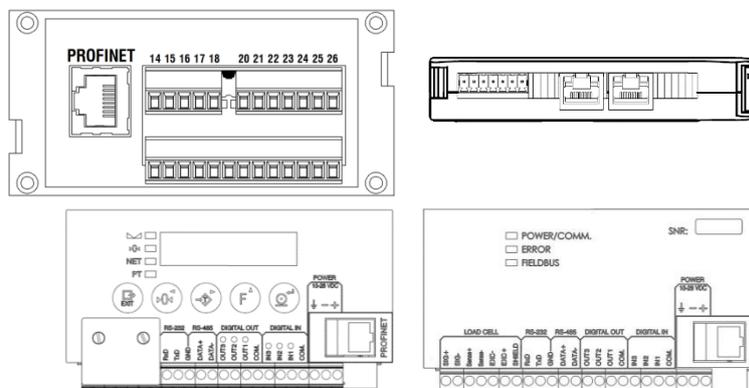

PROFINET connector in SWIFT Panel, SWIFT V, Rail and SWIFT COM

PROFINET interface provides real time (RT) PROFINET IO communication with the device (equipment that works as a “slave”) to communicate with a controller (equipment that works as a “Master”).

The device must have a unique name across the network to be able to communicate.

The configuration of this name can be done from the indicator’s menu or through the PLC configuration software.

For more information, see: “**SWIFT Operation and Configuration Manual**”.

A PROFINET network uses three different addresses to communicate: MAC address, IP address and the device name (a logic name for the module that is unique across the total configuration):

- MAC address must be unique for each device and cannot be changed.
- IP address must be unique and can be assigned by the Master. Our device doesn’t allow the IP address configuration from the indicator’s menu so the IP address must be assigned from the Master when initializing connection.
- The name of the device must be unique. This name is the parameter that identifies the device across the network. When there is a need to replace a damaged device, the new device must be configured with the same name than the old one to be able to be recognized by the PLC.

1.4 Configuration files

SWIFT with field bus communication uses configuration files to indicate to the programming software of the PLC the communication parameters required. The files can be downloaded from the SWIFT section on UTILCELL website: <https://www.utilcell.es/electronica/swift/>

PLC configuration files	
Field bus	File name
EtherNet/IP	005A000C00020300.eds
	UT_NRP90-EIS-144_3.eds
PROFIBUS	hms_1810.gsd
PROFINET	GSDML-V2.3-HMS-ABICPRT-20130219.xml
	GSDML-V2.42-HILSCHER-NRP 90-RE PNS-20221108.xml

1.5 Communication format

The Weight and the status are sent to the Master across the field bus. Also, it's possible to accede to the parameters and calibration of the device.

To communicate with the Master, the device uses an Input section (write from the Master) and an Output section (read from the Master). These sections appear as **input/output blocks** for the ETHERNET/IP / PROFIBUS / PROFINET network and there is a cyclic interchange of information between the Master and the Slave. In our case, **these two sections have a size of 46 bytes each one.**

To execute functions in the device we need to use a command register that receive the orders from the Master.

Due to the quantity of configurable parameters of the device, we have divided the input/output sections in a non-paged section and a paged section. By selecting different pages, we have access to the different parameters of the device. This configuration is represented in the next table.

	Address (BYTES)	OUTPUT AREA (read from Master)	INPUT AREA (write from Master)
NON-PAGED SECTION	0 - 1	Output section Non-paged	Input section Non-paged
	...		
	...		
	...		
	26 - 27		
PAGED SECTION	28 - 29	Output section paged	Input section paged
	...		
	...		
	...		
	44 - 45		

Memory registers from 0 to 27 are the non-paged section and contain the input and output data that are always accessible from the Master.

Registers from 28 to 45 are the paged section and its content depends on the selection of the *Command Register* (write addresses 12,13) and the page selection register to read or write (write addresses 16,17).

Paged section has two distinct types of page:

- 1- Read/write pages: Is possible to read and write the content of these pages. These pages are numbered starting from 1 but always lower than 100.
- 2- Only read pages: These pages contain information that can be only read. These pages are numbered starting from 100.

1.5.1 Memory mapping

1.5.1.1 Non-paged Output Section (read from Master)

READ			
Bytes Input area			
Address	Nº bytes	Description	Range Value
0	2	SetPoint1(High)	
2	2	SetPoint1(Low)	
4	2	SetPoint2(High)	
6	2	SetPoint2(Low)	
8	2	SetPoint3(High)	
10	2	SetPoint3(Low)	
12	2	Gross weight(High)	
14	2	Gross weight(Low)	
16	2	Net weight (High)	
18	2	Net weight (Low)	
20	2	Status weight	See table "1-A"
22	2	Input/output status	See table "1-B"
24	2	Command Status Register	See table "1-D"
26	2	Number of last page read	

1.5.1.2 Non-paged Input Section (write from Master)

WRITE			
Bytes Output area			
Address	Nº bytes	Description	Range Value
0	2	SetPoint1(High) (1-2)	
2	2	SetPoint1(Low) (1-2)	-CAP...CAP (1-3)
4	2	SetPoint2(High) (1-2)	
6	2	SetPoint2(Low) (1-2)	-CAP...CAP (1-3)
8	2	SetPoint3(High) (1-2)	
10	2	SetPoint3(Low) (1-2)	-CAP...CAP (1-3)
12	2	Command Register	See table "1-C"
14	2	Digital outputs	0...7 (1-1)
16	2	Page number to read or to write	
18	2	DataWrValue(High)	
20	2	DataWrValue(Low)	
22	2	Reserved...	
24	2	Reserved...	
26	2	Reserved...	

- (1-1) To enable the modification of the status of a digital output it must be configured as "PC_Ctr".
Bit 0 corresponds to the relay 1, bit 1 to the relay 2, bit 2 to the relay 3.
- (1-2) To update setpoint of the equipment it is necessary to write the corresponding command in the Command Register (commands CMD_WR_SETP or CMD_WR_SETP_E2P).
- (1-3) This value must be multiple of the digital division and the decimal point of the equipment. It can never be lower than -99999.

1.5.1.2.1 Using command registers and status command register

To send an order to the device and check the execution of the order we need to use two registers of 16 bits, one to write: *Command register* and another to read: *Command Status register*. With the first command, we send the order and reading the second command we check the response of the device.

Due to the way that the information is exchanged between master and slave (cyclic transmission of data) it's necessary to use one bit to mark when we want to execute a new command. This bit is the bit 15 of the *Command register* (write address 12 and 13). The device executes a command when there is a transition from "0" to "1" of this bit, so we need to write the command with this bit at "0" and then switch this bit to "1". The format of this register is as follows:

<i>Command register</i>															
Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Exec	- not used -							Command							

Example: To set a semi-automatic tare, we will send the command: CMD_TARE (code 2). We need to write on the *Command register* the value 2:

In hexadecimal is: (16 bits) 0x0002: Register 12: 0x00 Register 13: 0x02

Now we will write on the bit Exec (bit 15) a "1" to order to the device to execute the command, to do this we need to write the value 0x80 in the register 12. Therefore, it will be:

Register 12: 0x80 Register 13: 0x02 → *Command register* = 0x8002

Reading the *Command Status Register* we will see the response of the device. This register has the following format:

<i>Command Status Register</i>															
Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Counter		Status code						Command							

Counter: Is a cyclic counter of 2 bits that increase each time the device accepts a command.

Status code: These bits will show the numerical value that corresponds to the state of the command execution. See table "1-D".

Command: Is the same command code that is written in the *Command register* except for the command CMD_CANCEL in that case, appears the command code that is cancelled.

When the status code shows *Device busy* the device will not answer to any command.

This indicates that the device needs to finish executing an action before accepting more commands.

1.5.1.2.1.1 Command performance details

The list of commands available is shown in table 1-C.

1.5.1.2.1.1.1 CMD_PTARE

Command to set a pre-set tare.

This command must be executed with the *DataWrValue* registers of the non-paged section.

Procedure:

1. Write on *DataWrValue registers* (18...21 non-paged input section) the value of the pre-set tare. This value must be compatible with the device division.
2. Execute CMD_PTARE command.

1.5.1.2.1.1.2 CMD_ZERO_CAL

This command sets the calibration zero of the scale.

To execute this command, the device must be in REMOTE mode with the calibration switch in the UNPROTECTED position.

Be aware that the scale is empty before sending this command.

Procedure:

1. Set the device in REMOTE mode and set the calibration switch to UNPROTECTED.
2. Be aware that the scale is empty.
3. Send command CMD_ZERO_CAL to calibrate.
4. Read **Command Status Register** to see the result of the execution.
5. This adjustment is saved in the non-volatile memory without the need of executing the command CMD_SAVE_E2P.

1.5.1.2.1.1.3 CMD_SPAN_CAL

This command sets the calibration span of the scale using a known mass.

To execute this command, the device must be in REMOTE mode with the calibration switch in the UNPROTECTED position.

Before sending this command, we must write in the *DataWrValue* registers (registers 18...21 of the non-paged input section) the value of the weight that is on the scale.

Procedure:

1. Set the device in REMOTE mode and set the calibration switch to UNPROTECTED.
2. Write in *DataWrValue* registers the value of the calibration mass.
3. Put the calibration mass on the scale and check that the weight is stable.
4. Send command CMD_SPAN_CAL to calibrate.
5. Read **Command Status Register** to see the result of the execution.
6. This adjustment is saved in the non-volatile memory without the need of executing the command CMD_SAVE_E2P.

1.5.1.2.1.1.4 CMD_NUM_CAL

Numerical calibration of the span.

To execute this command, the device must be in REMOTE mode with the calibration switch in the UNPROTECTED position.

Before sending this command, we must write in the variables on page 19 the correct values using CMD_WR_PAGE command.

Procedure:

1. Set the device in REMOTE mode and set the calibration switch to UNPROTECTED.
2. Write the correct values of the following variables: **LCAP** (load cell capacity), **Lno** (number of load cells), **LSn** (average sensitivity of load cells), **Dead Load** (dead load).
3. Send command CMD_NUM_CAL.

1.5.1.2.1.1.5 CMD_FORCE_BLIND

Blind function allows to turn off the display, leaving only a blinking point (see “**SWIFT Operation and Configuration Manual**” to configure this function).

Apart from the automatic function that works with the timer, is possible to set the device in BLIND mode independently of the configuration of this function on the Setup's device.

This option can only be activated when the device is on the main screen. To exit this mode is needed to press the EXIT key.

1.5.1.2.1.1.6 CMD_EXIT_BLIND

This command disables the BLIND function. If the function was not enabled it does nothing. If we have the display off due to the BLIND function (doesn't matter if it was enabled automatically with the timer or with the CMD_FORCE_BLIND command), when we send the command CMD_EXIT_BLIND the display will turn on. In case of having the BLIND function enabled with the timer, when the time set finished, the display will turn off again.

1.5.1.2.1.1.7 CMD_RD_PAGE

Command to read a page.

This command must to be used with the register 16 of the non-paged input section.

Procedure:

1. We must write the number of the page we want to read in the register 16.
2. Execute command CMD_RD_PAGE. When executing this command, the paged output section is updated with the content of the selected page.

1.5.1.2.1.1.8 CMD_WR_PAGE

Command to write a page.

This command must to be used with the register 16 of the non-paged input section.

Procedure:

1. Write in the paged input section (registers 28...45) the content of the data to write.
2. Write in the register 16 of the non-paged input section the number of the page where the data will be copied.
3. Execute command CMD_WR_PAGE.
4. Read **Command Status Register** (register 24 of the non-paged output section) to know if the write has been done correctly.

The write command will fail if the range of values wrote is not compatible with the corresponding variable. To write the values of the variables there cannot be any failure. If there is a failure in one of the variables of the page, the rest of the variables will not be written.

1.5.1.2.1.1.9 CMD_SAVE_E2P

Write in the non-volatile memory (E2PROM) the modified variables with the last CMD_WR_PAGE command sent.

Be aware: This command only saves the variables of the last CMD_WR_PAGE command so if we are going to write in more than one page, we will need to send CMD_SAVE_E2P command before write in the next page. If we don't follow these steps, the modification of the variables will be only done in RAM and will be lost when the device is turned off.

1.5.1.2.1.1.10 CMD_CALSWITCH_SW

Command that changes the State of software calibration seal.

This command must be used with DataWrValue registers of the non-paged zone.

Procedure:

- Write PIN code in DataWrValue(High) register (Register 18).
- Write new desired value for the software calibration seal. (0: opened, 1: closed) on DataWrValue(Low) register (Register 20).
- Execute CMD_CALSWITCH_SW command.

1.5.1.2.1.1.11 CMD_SETUP_MODE

Command to put the Device in Remote Setup Mode.

This command should be used with the DataWrValue registers in the input section non-paged.

Procedure:

1. Write in the DataWrValue (High) register (registers 18,19 input section non-paged) the PIN.
2. Execute commando CMD_SETUP_MODE (99d)

1.5.1.2.1.1.12 CMD_EXIT_SETUP

Command to exit the Setup Mode.

The SWIFT will accepts this command only if it is running in remote setup mode. In case to not being in this mode, it will returns the error code ST_NAK (code 2) in the status register.

Once the command is received, the device will exit the remote mode, running back to the weighing mode with all new parameters. This change will take about 2 seconds, and the device will not respond to new commands.

1.5.1.2.1.1.13 CMD_START_DATA

Start application dosage indicating the Target

Procedure:

1. Write the weight to be dosed in the DataWrValue registers.
2. Execute the command CMD_START_DATA
3. Read the Command Status Register to check if the equipment has accepted the command.

1.5.1.2.1.2 Status code depending on the command

When the execution of a command is finished correctly the device will return ST_ACK (0x01).

The following list shows the different responses of the device depending on the command sent when the response is not ST_ACK.

CMD_ZERO command:

- ST_RUNNING: Operation in execution.
- ST_ERROR: Command ended with errors. Has not been possible to set the zero.
- ST_CANCELLED: Command cancelled (requires sending CMD_CANCEL).

CMD_TARE command:

- ST_RUNNING: Operation in execution.
- ST_ERROR: Command ended with errors. Has not been possible to set a semi-automatic tare.
- ST_CANCELLED: Command cancelled (requires sending CMD_CANCEL).

CMD_PTARE command:

- ST_INVALID_DATA: Tare value introduced is not valid.

CMD_PRINT command:

- ST_RUNNING: Operation in execution.
- ST_ERROR: Command ended with errors. The ticket cannot be created.
- ST_CANCELLED: Command cancelled (requires sending CMD_CANCEL).

CMD_START command:

- ST_NAK: The device is not in Checkweigher/Dosing mode or the Block signal in dosing is activated.
- ST_ERROR: Device busy or is not allowed the Start by command.

CMD_START_DATA command:

- ST_NAK: The device is not in Dosing mode or the Block signal in dosing is activated.
- ST_ERROR: Device busy or is not allowed the Start by command.
- ST_INVALID_DATA: The weight written in DataWrValue does not meet the requirements to start dosing: the weight must be greater than 0, less than MAX scale and comply with the scale division.

CMD_CTOTAL command:

- ST_NAK: Accumulation option is not enabled or there are not accumulated operations.
- ST_ERROR: Weighing in execution, is not possible to close accumulation.

CMD_ZERO_CAL command:

- ST_PROTECTED: Device is not in UNPROTECTED mode.
- ST_E2P_ERROR: Error while writing on E2P.
- ST_BUSY: Operation in execution, device busy (indicator doesn't accept commands).

CMD_SPAN_CAL command:

- ST_PROTECTED: Device is not in UNPROTECTED mode.
- ST_E2P_ERROR: Error while writing on E2P.
- ST_INVALID_DATA: Weight introduced to calibrate is not valid.
- ST_BUSY: Operation in execution, device busy (indicator doesn't accept commands).

CMD_NUM_CAL command:

- ST_PROTECTED: Device is not in UNPROTECTED mode.

CMD_RESET command:

- ST_RUNNING: Operation in execution.

CMD_SAVE_E2P command:

- ST_NAK: There is not an active page to save in E2P.
- ST_ERROR: There are no data to save (there has not been any write on the page since the last time saved).
- ST_E2P_ERROR: Error while writing on E2P.

CMD_PAGE_RD_SEL command:

- ST_NAK: Asked page doesn't exist.
- ST_BUSY: Operation in execution, device busy (indicator doesn't accept commands).

CMD_PAGE_WR_SEL command:

- ST_INVALID_DATA: On page 15 (Scale definition) this error appears if the division introduced is not correct or if the division number of the SPAN (CAPACITY/DIVISION) is above 100.000.
- ST_NAK: There is a parameter out of range.

CMD_WR_SETPOINTS command:

- ST_INVALID_DATA: The set point value is not valid.

CMD_WR_SETPOINTS_E2P command:

- ST_INVALID_DATA: The set point value is not valid.
- ST_E2P_ERROR: Error while writing on E2P.

CMD_CALSWITCH_SW command:

- ST_PROTECTED: Incorrect PIN or calibration number equal to 9999.
- ST_INVALID_DATA: Incorrect new state value for software calibration seal.
- ST_E2P_ERROR: Error while writing on E2P.

CMD_SETUP_MODE command

- ST_NAK: Command not accepted. The device couldn't be in remote setup mode from the present status.

CMD_EXIT_SETUP command

- ST_NAK: The device is not in remote setup mode. Command not accepted.

1.5.1.3 Parameter tables of the non-paged Read and Write section

Table "1-A"			
Register "Weight status"			
Bit	Description	Meaning	
		0	1
0	Weight stability	Off	On
1	Zero indication	Off	On
2	Net Led	Off	On
3	Pre-set Tare Led	Off	On
4	Underload	No	Yes
5	Overload	No	Yes
6	Error Ref.	No	Yes
7	ADC error	No	Yes
8...10	Weight decimal point (3bits)
11	Instrument On-Line	No	Yes
12	ADC Fault	No	Yes
13	LowBat	No	Yes
14	Reserved		
15	Reserved		

Table "1-B"			
Input/Output Status			
Bit	Description	Meaning	
		0	1
0	Digital input 1	Off	On
1	Digital input 2	Off	On
2	Digital input 3	Off	On
3	Relay 1	Off	On
4	Relay 2	Off	On
5	Relay 3	Off	On
6	Relay 4 ⁽¹⁾	Off	On

⁽¹⁾ Only available with devices with 4 output relays

Table "1-C"						
Command Registers (Write)						
Bit	Description	Code				
		Dec.	Hex.			
	Command					
	<i>Name</i>	<i>Command description</i>				
0...7	CMD_ZERO	Semi-automatic zero			1	0x01
	CMD_TARE	Semi-automatic tare			2	0x02
	CMD_PTARE	Pre-set tare			3	0x03
	CMD_CTARE	Exit tare			6	0x06
	CMD_PRINT	Print ticket			7	0x07
	CMD_START	Start application			10	0x0A
	CMD_CTOTAL	Exit accumulation			11	0x0B
	CMD_PAUSE	Pause			12	0x0C
	CMD_START_DATA	Start command data (application)			13	0x0D
	CMD_CONTINUE	Continue			14	0x0E
	CMD_STOP	Stop			15	0x0F
	CMD_ZERO_CAL	Zero calibration			16	0x10
	CMD_SPAN_CAL	SPAN calibration			17	0x11
	CMD_NUM_CAL	Execute numerical calibration			18	0x12
	CMD_RESET	Reset indicator			30	0x1E

CMD_CALSWITCH_SW	Change software calibration seal state (1-9)	20	0x14
CMD_SAVE_E2P	Save page to E2P (1-4)	32	0x20
CMD_FORCE_BLIND	Force BLIND mode	40	0x28
CMD_EXIT_BLIND	Exit BLIND mode	41	0x29
CMD_CHKW_TESTON (1-8)	CheckWeigher mode TEST ON	42	0x2A
CMD_CHKW_TESTOFF	CheckWeigher mode TEST OFF	43	0x2B
CMD_EXIT_SETUP	Exit from remote setup mode (1-11)	98	0x62
CMD_SETUP_MODE	Go into remote setup mode (1-10)	99	0x63
CMD_CANCEL	Cancel a command in execution	100	0x64
CMD_RD_PAGE	Read of the selected page	101	0x65
CMD_WR_PAGE	Write on the selected page	102	0x66
CMD_WR_SETP	Setpoints update (1-5)	103	0x67
CMD_WR_SETP_E2P	Setpoints update write on E2P (1-5)	104	0x68
8...14	Not used		
15	The change from 0 to 1 of this bit executes the command specified in bit 0 to 7		

Table "1-D"		
Status command register (Read)		
Bit	Description	Value
0...7	Command received	0...255
8...13	Status code	
	ST_ACK	Command accepted
	ST_NAK	Command not accepted
	ST_RUNNING	Command in execution
	ST_CANCELLED	Command cancelled (1-6)
	ST_BUSY	Indicator busy
	ST_INVALID_DATA	Invalid data command
	ST_ERROR	Error while executing command
	ST_E2P_ERROR	Error saving on E2PROM
	ST_PROTECTED	Protected parameter
14,15	Cyclic counter of 2 bits (1-7)	0...3

- (1-4) Command CMD_SAVE_E2P saves the data on the page written by CMD_WR_PAGE command, to do this is necessary to send the command just after writing the page. If we change the page, the page written before will not be saved with CMD_SAVE_E2P command.
- (1-5) Sending that command, the three setpoints written in the write registers from 0 to 11 will be copied to the indicator's setpoints. If we use command 103 (CMD_WR_SETP) they will not be saved on E2PROM so they will be lost when turning off the device. If we use command 104 (CMD_WR_SETP_E2P) the values will be saved in the E2PROM.

E2PROM memory has a writing limit of 1.000.000 writings so we should avoid writing constantly in that memory. Systems that need to send the set point constantly should use CMD_WR_SETP command that modifies only the RAM.

- (1-6) This code indicates that the command on bits 0...7 has been cancelled with command **Cancel** (code 100. See table "1-C").
- (1-7) The cyclic counter increments each time that the device receives a new command.
- (1-8) This parameter is not saved in the NVM, after a reset of the indicator the TEST option turns OFF.
- (1-9) To change software calibration seal status, write PIN code in DataWrValue(High) register, desired value in DataWrValue(LOW) register and execute command 20d.
- (1-10) To go into the remote mode, the PIN must be written in the DataWrValue(High) register, previous to send the command. If the PIN is not properly written, the device will go in "protected" Remote Setup Mode, it means, no metrological parameter will be modified.
- (1-11) Then to send the command to exit the remote setup mode, you will have to wait two seconds minimum to access to MODBUS due to internal processes of the device.

1.5.1.4 Paged read/write section

This section has 28 pages, from page 1 to page 28:

PAGE 1 (read/write)					
Bytes input area		Bytes output area			
Address	Nº bytes	Address	Nº bytes	Description	Value ranges
RS-485 menu					
28	2	28	2	Type	0:Off,1:dE,2:St,4:ASCII,5:RTU, 6:DAT
30	2	30	2	Format	0...13 (2-6)
32	2	32	2	Baudrate	0...5 (2-7) see table "2-F"
34	2	34	2	Parity	0...2 → 0: None, 1:Even, 2:Odd
36	2	36	2	Transmission rate (Out. rate)	0...8 (2-8) see table "2-G"
38	2	38	2	Termination	0...3 (2-9) see table "2-H"
40	2	40	2	Protocol	0: None, 1: RS485
42	2	42	2	Address	1...99

Changes on RS-485 parameters will be available after restarting the indicator.

PAGE 2 (read/write)					
Bytes input area		Bytes output area			
Address	Nº bytes	Address	Nº bytes	Description	Value ranges
RS-232 menu					
28	2	28	2	Type	0:Off, 1:dE, 2:St, 3:Ti, 4:ASCII, 5:RTU 6:DAT
30	2	30	2	Format	0...13 (2-6)
32	2	32	2	Baudrate	0...5 (2-7) see table "2-F"
34	2	34	2	Parity	0...2 → 0:None, 1:Even, 2:Odd
36	2	36	2	Transmission rate (Output rate)	0...8 (2-8) see table "2-G"
38	2	38	2	Termination	0...3 (2-9) see table "2-H"
40	2	40	2	Empty (2-25)	
42	2	42	2	Address	1...99

Changes on RS-232 parameters will be available after restarting the indicator.

PAGE 3 (read/write)					
Bytes input area		Bytes output area			
Address	Nº bytes	Address	Nº bytes	Description	Value ranges
A_Out menu – Analog output					
28	2	28	2	Type	0:Gross 1:Net

30	2	30	2	Output	0: 4-20mA, 1: 0-20mA, 2: 0-5V, 3: 0-10V
32	2	32	2	Error	0:FULL, 1: HOLD, 2: MIN
34	2	34	2	Aout_0 (H)	0...CAP (2-13)
36	2	36	2	Aout_0 (L)	
38	2	38	2	Aout_F (H)	0...CAP (2-13)
40	2	40	2	Aout_F (L)	
42	2	42	2	Aout.F0	0...0x1999
44	2	44	2	Aout.FF	0...0x1999

PAGE 4 (read/write)					
Bytes input area		Bytes output area			
Address	N° bytes	Address	N° bytes	Description	Value ranges
D_Out menu – Digital output 1 (1/2)					
28	2	28	2	UL1 Setpoint 1 (H)	–CAP...CAP (2-20) (also available in PAGE 43, Adress 28)
30	2	30	2	UL1 Setpoint 1 (L)	
32	2	32	2	Type 1	0...14 (2-10) see table “2-I”
34	2	34	2	Rel 1	0...2 0:Setpoint 1 1:Setpoint 2 2:Setpoint 3 3:Setpoint 4 (2-31)
36	2	36	2	Trip 1	0...3 (2-11) see table “2-J”
38	2	38	2	Band 1 (H)	0...CAP (2-13)
40	2	40	2	Band 1 (L)	

42	2	42	2	Hy 1 (H)	0...CAP (2-13)
44	2	44	2	Hy 1 (L)	

PAGE 5 (read/write)					
Bytes input area		Bytes output area			
Address	N° bytes	Address	N° bytes	Description	Value ranges
Menu D_Out - Digital output 1 (2/2)					
28	2	28	2	d_Loc 1	0:OFF, 1:ON
30	2	30	2	Timer 1	0...200 200 is the equivalent of 20.0s
32	2	32	2	Delay 1	0...200 200 is the equivalent of 20.0s

PAGE 6 (read/write)					
Bytes input area		Bytes output area			
Address	N° bytes	Address	N° bytes	Description	Value ranges
D_Out menu - Digital output 2 (1/2)					
28	2	28	2	UL2 Setpoint 2 (H)	-CAP...CAP (2-20) (also available in PAGE 43, Adress 30)
30	2	30	2	UL2 Setpoint 2 (L)	
32	2	32	2	Type 2	0...14 (2-10) see table "2-I"
34	2	34	2	Rel 2	0...2 0:Setpoint 1 1:Setpoint 2 2:Setpoint 3 3:Setpoint 4 (2-31)
36	2	36	2	Trip 2	0...3 (2-11) see table "2-J"
38	2	38	2	Band 2 (H)	0...CAP (2-13)
40	2	40	2	Band 2 (L)	
42	2	42	2	Hy 2 (H)	0...CAP (2-13)
44	2	44	2	Hy 2 (L)	

--	--	--	--	--	--

PAGE 7 (read/write)					
Bytes input area		Bytes output area			
Address	N° bytes	Address	N° bytes	Description	Value ranges
D_Out menu - Digital output 2 (2/2)					
28	2	28	2	d_Loc 2	0:OFF, 1:ON
30	2	30	2	Timer 2	0...200 200 is the equivalent of 20.0s
32	2	32	2	Delay 2	0...200 200 is the equivalent of 20.0s

PAGE 8 (read/write)					
Bytes input area		Bytes output area			
Address	N° bytes	Address	N° bytes	Description	Value ranges
D_Out menu - Digital output 3 (1/2)					
28	2	28	2	UL3 Setpoint 3 (H)	-CAP...CAP (2-20) (also available in PAGE 43, Adress 32)
30	2	30	2	UL3 Setpoint 3 (L)	
32	2	32	2	Type 3	0...14 (2-10) see table "2-I"
34	2	34	2	Rel 3	0...2 0:Setpoint 1 1:Setpoint 2 2:Setpoint 3 3:Setpoint 4 (2-31)
36	2	36	2	Trip 3	0...3 (2-11) see table "2-J"
38	2	38	2	Band 3 (H)	0...CAP (2-13)
40	2	40	2	Band 3 (L)	
42	2	42	2	Hy 3 (H)	0...CAP (2-13)
44	2	44	2	Hy 3 (L)	

PAGE 9 (read/write)					
Bytes input area		Bytes output area			
Address	N° bytes	Address	N° bytes	Description	Value ranges
D_Out menu - Digital output 3 (2/2)					
28	2	28	2	d_Loc 3	0:OFF, 1:ON
30	2	30	2	Timer 3	0...200 200 is the equivalent of 20.0s

32	2	32	2	Delay 3	0...200 200 is the equivalent of 20.0s
----	---	----	---	---------	---

Menu D_Out – Digital output 4: See pages 40 & 41

PAGE 10 (read/write)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
D In menu – Digital input 1					
28	2	27	2	Type 1	0: OFF, 1: TARE 2: CLR TARE 3: ZERO, 4:PRINT, 5:START, 6:CLRTOTAL, 7:APP, 8: GROSS/NET
30	2	28	2	Func 1	0: LOW 1: HIGH

PAGE 11 (read/write)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
D In menu – Digital input 2					
28	2	27	2	Type 2	0: OFF, 1: TARE 2: CLR TARE 3: ZERO, 4:PRINT, 5:START, 6:CLRTOTAL, 7:APP, 8: GROSS/NET
30	2	28	2	Func 2	0: LOW 1: HIGH

PAGE 12 (read/write)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
D In menu – Digital input 3					
28	2	27	2	Type 3	0: OFF, 1: TARE 2: CLR TARE 3: ZERO, 4:PRINT, 5:START, 6:CLRTOTAL, 7:APP, 8: GROSS/NET
30	2	28	2	Func 3	0: LOW 1: HIGH

PAGE 13 (read/write)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
Binary setpoints 1...4					
28	2	28	2	Binary mode status	0:OFF 1:ON (2-24)
30	2	30	2	Setpoint 1 BINOUT (H) (2-23)	-CAP...CAP (2-20)
32	2	32	2	Setpoint 1 BINOUT (L) (2-23)	
34	2	34	2	Setpoint 2 BINOUT (H) (2-23)	-CAP...CAP (2-20)
36	2	36	2	Setpoint 2 BINOUT (L) (2-23)	
38	2	38	2	Setpoint 3 BINOUT (H) (2-23)	-CAP...CAP (2-20)
40	2	40	2	Setpoint 3 BINOUT (L) (2-23)	
42	2	42	2	Setpoint 4 BINOUT (H) (2-23)	-CAP...CAP (2-20)
44	2	44	2	Setpoint 4 BINOUT (L) (2-23)	

PAGE 14 (read/write)

Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
Binary setpoints 5...7					
28	2	28	2	Setpoint 5 BINOUT (H) (2-23)	-CAP...CAP (2-20)
30	2	30	2	Setpoint 5 BINOUT (L) (2-23)	
32	2	32	2	Setpoint 6 BINOUT (H) (2-23)	-CAP...CAP (2-20)
34	2	34	2	Setpoint 6 BINOUT (L) (2-23)	
36	2	36	2	Setpoint 7 BINOUT (H) (2-23)	-CAP...CAP (2-20)
38	2	38	2	Setpoint 7 BINOUT (L) (2-23)	

PAGE 15 (read/write)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
DEF menu – Scale definition					
28	2	28	2	CAP (CAP high)	1...999999 (2-12)
30	2	30	2	(CAP Low)	
32	2	32	2	Digital division	1,2,5,10,20,50
34	2	34	2	DP	0...4
36	2	36	2	0-Track	0...6 (2-1) see table "2-A"
38	2	38	2	0-toP	0:1.9% 1:100%
40	2	40	2	0-Start	0:OFF 1:ON
42	2	42	2	UNIT	0...5 see table "2-N"
44	2	44	2	UNLIM	0: -OVERLOAD 1: -20d

PAGE 16 (read/write)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
Option menu - Options					
28	2	28	2	Filter	0...15 (2-2) see table "2-B"
30	2	30	2	Band	0...5 (2-3) see table "2-C"
32	2	32	2	Period (settling time)	0...7 (2-21) see table "2-M"

PAGE 17 (read/write) REMOTE ONLY					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
Option menu - Options					
28	2	28	2	Tare LC	0:ON 1:OFF
30	2	30	2	Lang	0...5 (2-4) see table "2-D"
32	2	32	2	LOC	0...31 (2-5) see table "2-E"
34	2	34	2	PRT	0...255
36	2	36	2	Prt_t1	0:Off,1: Standard
38	2	38	2	t.ID	0...65535
40	2	40	2	BLIND	0...7: OFF ,2,5,10,20,30,45,60 seconds

PAGE 18 (read/write) PROTECTED-REMOTE ONLY					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
CAL 1 menu – Calibration coefficient					
28	2	28	2	Zero Coefficient (H)	0...0x00FFFFFF
30	2	30	2	Zero Coefficient (L)	
32	2	32	2	SPAN Coefficient(H)	0...CAPx10 (2-19)
34	2	34	2	SPAN Coefficient(L)	
36	2	36	2	LIN_C (H)	0...CAPx10 (2-19)
38	2	38	2	LIN_C (L)	
40	2	40	2	LIN_I (H)	0...CAPx10 (2-19)
42	2	42	2	LIN_I (L)	
44	2	32	2	LIN	0: OFF, 1: ON (2-15), 2: RESET (2-16)

PAGE 19 (read/write) PROTECTED-REMOTE ONLY					
Bytes input area		Bytes output area			

Address	Nº bytes	Address	Nº bytes	Description	Value ranges
CAL 2 menu – Numerical calibration					
28	2	28	2	LCAP (H)	
30	2	30	2	LCAP (L)	
32	2	32	2	Lno (Nº of load cells)	0...8
34	2	34	2	LSn (Average sensitivity)	0... 35000 (2-17)
36	2	36	2	Dead_Load (H)	
38	2	38	2	Dead_Load (L)	-CAP...CAP (2-22)

PAGE 20 (read/write)					
Bytes input area			Bytes output area		
Address	Nº bytes	Address	Nº bytes	Description	Value ranges
APPLI menu – Active application					
28	2	28	2	APP	0:None; 1:CHECK; 2:FILL

PAGE 21 (read/write)					
Bytes input area			Bytes output area		
Address	Nº bytes	Address	Nº bytes	Description	Value ranges
APPLI menu – Checkweigher Application (1/3)					
28	2	28	2	START	0:KEY; 1:INP; 2:KEY.INP; 3:NET
30	2	30	2	TRIG (H)	
32	2	32	2	TRIG (L)	1div. ≤ TRIG ≤ MAX
34	2	34	2	BAND (H)	
36	2	36	2	BAND (L)	1div. ≤ BAND ≤ MAX
38	2	38	2	T_DEL	0.000 ... 50.000 seconds
40	2	40	2	T_ACC	0.000 ... 50.000 seconds
42	2	42	2	T_DIS	0.000 ... 50.000 seconds
44	2	44	2	CANCEL	0:OFF; 1:ON;

PAGE 22 (read/write)					
Bytes input area			Bytes output area		
Address	Nº bytes	Address	Nº bytes	Description	Value ranges
APPLI menu - Checkweigher Application (2/3)					
28	2	28	2	TOTAL	0:OFF; 1:ON; 2:Store
30	2	30	2	PC	0:OFF;1:RS232;2:RS485; 3:RS232 y RS485
32	2	32	2	Filter	0...15 (2-2) see table "2-B"
34	2	34	2	PASS FUNCTION	0:OFF ;1:DELAY;2:INPUT
36	2	36	2	LOW LIMIT (H) (L1)	0...CAP (2-13)
38	2	38	2	LOW LIMIT (L)	
40	2	40	2	HIGH LIMIT (H) (L2)	0...CAP (2-13)
42	2	42	2	HIGH LIMIT (L)	
44	2	44	2	PASS DISPLAY (DIS)	0:Net ; 1:IN/OUT; 2:50/50

PAGE 23 (read/write)					
Bytes input area			Bytes output area		
Address	Nº bytes	Address	Nº bytes	Description	Value ranges
APPLI menu - Dosing Application (1/6)					
28	2	28	2	TYPE	0:Charge net; 1:Charge gross; 2:Discharge (net)
30	2	30	2	TRIGGER	0:Key , 1:Input, 2:Key or Input, 3:Auto.
32	2	32	2	START_TARE_L (L)	
34	2	34	2	START_TARE_L (H)	-CAP...CAP (2-20)
36	2	36	2	START_TARE_H (L)	
38	2	38	2	START_TARE_H (H)	-CAP...CAP (2-20)
40	2	40	2	START_DELAY	0 ...655 (2-26)

42	2	42	2	INITIAL FUNCTION	0:OFF ;1:TARE;2:CLEAR TARE; 3:RELAY A; 4:RELAY_B
44	2	44	2	PARAMETER INITIAL FUNC.	1...655 (2-26) Default: 5

PAGE 24 (read/write)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
APPLI menu - Dosing Application (2/6)					
28	2	28	2	DOSAGE SPEEDS	0: 1 speed ; 1: 2 speeds
30	2	30	2	DOSAGE SEQUENCE	0:ON ; 1:OFF
32	2	32	2	ASK (TARGET)	0:NO; 1:LAST ; 2:QUERY
34	2	34	2	TARGET (L)	-CAP...CAP (2-20)
36	2	36	2	TARGET (H)	
38	2	38	2	FINE (L)	-CAP...CAP (2-20)
40	2	40	2	FINE (H)	
42	2	42	2	CONTROL DELAY 1	0 ...999 (2-27)
44	2	44	2	CONTROL DELAY 2	0 ...999 (2-27)

PAGE 25 (read/write)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
APPLI menu - Dosing Application (3/6)					
28	2	28	2	IN FLIGHT WEIGHT (L)	0...CAPx10 (2-19)
30	2	30	2	IN FLIGHT WEIGHT (H)	
32	2	32	2	IN FLIGHT CORRECTION	0 ...100
34	2	34	2	IN FLIGHT LIMIT (L)	0...CAP (2-20)
36	2	36	2	IN FLIGHT LIMIT (H)	
38	2	38	2	LACKMAT_TIME (feed check)	0 ...65 (seconds)
40	2	40	2	WAIT TIME (waiting time)	0 ...655 (2-26)
42	2	42	2	END FUNCTION	0:OFF ;1:TARE;2:CLEAR TARE; 3:RELAY A; 4:RELAY_B
44	2	44	2	PARAMETER END FUNCTION	1...655 (2-26) Default: 5

PAGE 26 (read/write)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
APPLI menu - Dosing Application (4/6)					
28	2	28	2	ERROR TYPE	0:WEIGHT; 1:PERCENT
30	2	30	2	ERROR POS (L)	(2-28)
32	2	32	2	ERROR POS (H)	
34	2	34	2	ERROR NEG (L)	(2-28)
36	2	36	2	ERROR NEG (H)	
38	2	38	2	SEND PC AUTO	0:OFF ; 1:RS232; 2:RS485; 3:BOTH
40	2	40	2	END INDICATION	0...655 (2-26) ;Default: 20

PAGE 27 (read/write)

Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
APPLI menu - Dosing Application (5/6)					
28	2	28	2	COARSE RELAY	0...3 (2-29)
30	2	30	2	FINE RELAY	0...3 (2-29)
32	2	32	2	ACTIVE RELAY	0...3 (2-29)
34	2	34	2	PAUSE RELAY	0...3 (2-29)
36	2	36	2	ERROR RELAY	0...3 (2-29)
38	2	38	2	A RELAY	0...3 (2-29)
40	2	40	2	B RELAY	0...3 (2-29)
42	2	42	2	START INPUT	0...3 (2-30)
44	2	44	2	PAUSE INPUT	0...3 (2-30)

PAGE 28 (read/write)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
APPLI menu - Dosing Application (6/6)					
28	2	28	2	CANCEL INPUT	0...3 (2-30)
30	2	30	2	CONTINUE INPUT	0...3 (2-30)
32	2	32	2	BLOCK INPUT	0...3 (2-30)
34	2	34	2	START_CHECK	0: OFF ; 1: ON
36	2	36	2	PLUS (Supplement)	0...1000 (Equivalent to 0.0...100.0 %)

PAGE 35 (read/write)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
APPLI menu - Checkweigher Application (3/3)					
28	2	28	2	RELAY DALAY TIME	0...200 (2-26) 200 equivale a 20.0s
30	2	30	2	RELAY HOLD TIME	1...200 (2-26) 200 equivale a 20.0s
32	2	32	2	REJECTION INPUT	0:NONE; 1;2;3
34	2	34	2	REJECTION RELAY	0:NONE; 1;2;3
36	2	36	2	BUSY RELAY	0:NONE; 1;2;3
38	2	38	2	SYNC ERROR RELAY	0:NONE; 1;2;3

PAGE 40 (read/write) (2-31)					
Bytes input area		Bytes output area		Description	Value ranges
Address	N° bytes	Address	N° bytes		
Menu D_Out – Digital output 4 (1/2)					
28	2	28	2	UL4 Setpoint 4 (H)	-CAP...CAP (2-20) (also available in PAGE 43, Address 40)
30	2	30	2	UL4 Setpoint 4 (L)	
32	2	32	2	Type 4	0...13 (2-10) See table "2-1"
34	2	34	2	Rel 4	0...3 (2-31) 0:Setpoint 1 1:Setpoint 2

					2:Setpoint 3 3:Setpoint 4 (2-31)
36	2	36	2	Trip 4	0...3 (2-11) See table "2-J"
38	2	38	2	Band 4 (H)	0...CAP (2-13)
40	2	40	2	Band 4 (L)	
42	2	42	2	Hy 4 (H)	0...CAP (2-13)
44	2	44	2	Hy 4 (L)	

PAGE 41 (read/write) (2-31)					
Bytes input area		Bytes output area			
Address	Nº bytes	Address	Nº bytes	Address	Nº bytes
Menu D_Out – Digital output 4 (2/2)					
28	2	28	2	d_Loc 4	0:OFF, 1:ON
30	2	30	2	Timer 4	0...200 200 equal to 20.0s
32	2	32	2	Delay 4	0...200 200 equal to 20.0s

PAGE 43 (read/write) (2-31)					
Bytes input area		Bytes output area			
Address	Nº bytes	Address	Nº bytes	Address	Nº bytes
Setpoints					
28	2	28	2	UL1 Setpoint 1 (H)	-CAP...CAP (2-20)
30	2	30	2	UL1 Setpoint 1 (L)	
32	2	32	2	UL2 Setpoint 2 (H)	-CAP...CAP (2-20)
34	2	34	2	UL2 Setpoint 2 (L)	
36	2	36	2	UL3 Setpoint 3 (H)	-CAP...CAP (2-20)
38	2	38	2	UL3 Setpoint 3 (L)	
40	2	40	2	UL4 Setpoint 4 (H)	-CAP...CAP (2-20) (2-31)
42	2	42	2	UL4 Setpoint 4 (L)	

1.5.1.5 Write / read section parameters tables

Table "2-A"	
Identification code for parameter: 0-Track	
Code	Division
0	OFF
1	0.5d
2	1d
3	2d
4	3d
5	4d
6	5d

Tabla "2-D"	
Identification code for parameter: Lang (language)	
Code	Language
0	SPA
1	POR
2	FRE
3	ENG
4	GER
5	CAT

Table "2-B"	
Identification code for parameter: Filter	
Code	Filter
0	OFF
1	2
2	4
3	6
4	8
5	10
6	12
7	14
8	15
9	16
10	17
11	18
12	19
13	20
14	22
15	24

Table "2-C"	
Identification code for parameter: Band	
Code	Band (divisions)
0	OFF
1	0.5d
2	1d
3	2d
4	5d
5	10d

Tabla "2-E"	
LOC parameter (keyboard block). Each bit has a lock function. Bit at '1' means function locked.	
Bit	Function locked
0	Whole keyboard
1	Print key
2	Tare key
3	Zero key

Table "2-F"	
Identification code for parameter: Baudrate	
Code	Baudrate
0	4800
1	9600
2	19200
3	38400
4	57600
5	115200

Table "2-I"	
Identification code for parameter: Type (digital output)	
Code	Function
0	OFF
1	GROSS
2	NET
3	P_REL
4	N_REL
5	P_PREL
6	N_PREL
7	ZERO
8	ZERO NET
9	SS
10	INRANG
11	NEG
12	TARE
13	PRINT
14	PC_CTRL
15	APP

Table "2-G"	
Identification code for parameter: Transmission rate	
Code	Rate (send/s)
0	1
1	5
2	10
3	25
4	50
5	75
6	150
7	300
8	600

Table "2-J"	
Identification code for parameter: TRIP (digital output)	
Code	TRIP
0	HIGH
1	LOW
2	INBAND
3	OUTBAND

Table "2-H"	
Identification code for parameter: Termination	
Code	Termination
0	CR LF
1	CR
2	ETX
3	NONE

Table "2-M"	
Identification code for parameter: Period (time for settling time)	
Code	Period (ms)
0	25
1	50
2	100
3	150
4	200
5	250
6	500
7	1000

parameter UNIT	
Code	Division
0	kilos
1	Tones
2	grams
3	pounds
4	ounces
5	No unit

- (2-1) It refers to the 7 possible values: OFF-0.5d,1d,2d,3d,4d,5d.
- (2-2) It refers to the 16 possible values: OFF-2-4-6-8-10-12-14-15-16-17-18-19-20-22-24.
- (2-3) It refers to the 6 possible values: OFF-0.5d-1d-2d-5d-10d.
- (2-4) It refers to the 6 possible values: SPA,POR,FRE,ENG,GER,CAT.
- (2-5) Each bit of this variable has a lock function. See table "2-E".

- (2-6) It refers to the 14 possible values 0...13 that corresponds to format F1 to F15 (value 13 = F15, F14 not implemented).
- (2-7) It refers to the 6 possible values of baudrate: 4800,9600,19200,38400,57600,115200.
- (2-8) It refers to the 9 possible values: 1,5,10,25,50,75,150,300,600.
- (2-9) It refers to the 4 possible values: CRLF,CR,ETX,NONE.
- (2-10) It refers to the 16 possible values: see table "2-1".
- (2-11) It refers to the 4 possible values: HIGH, LOW, INBAND, OUTBAND.
- (2-12) Capacity cannot exceed 999999. Digital division combined with decimal point cannot exceed 100000 divisions.
- (2-13) This value must be multiple of the digital division without considering the decimal point (if exists). CAP is the scale capacity. This value never can be lower than -99999.
- (2-15) When writing value 1 on the LIN register; it calculates and enables the linearity correction while saves both parameters LIN_C y LIN_I in the E2PROM.
- (2-16) When writing value 2 in the LIN (RESET) parameter, it makes a reset of the linearity and parameter LIN turns automatically to 0 (OFF). The value is saved in the E2PROM.
- (2-17) This value is the sensitivity in mV/V multiplied per 10000. For example, value 20500 indicates a sensitivity of 2,05 mV/V.
- (2-19) This value is introduced with the precision per 10 (without considering the decimal point). Maximum capacity value x 10. Per example CAP=6000 maximum value = 60000.
- (2-20) This value must be multiple of the digital division without considering the decimal point (if exist). Never can be lower than -99999.
- (2-21) It refers to the 8 possible values for settling time 25,50,100,150,200,250,500,1000.
- (2-22) This value is programmed without considering the decimal point. Per example to introduce 2.500 we must send 2500.
- (2-23) These set points are not saved in the non-volatile memory.
- (2-24) When setting register 41150 (*Binary mode status*) to '1' the digital outputs start working in binary mode. Annulling the D_OUT configuration.
- (2-25) An empty register can be read or write but his content doesn't affect the program. Anyhow is recommended to not write in those registers because they can be used in future applications.
- (2-26) This value is set in tenths of second, for example, 105 equals 10.5 seconds
- (2-27) This value is set in hundredths of second, for example, 650 equals 6.50 seconds
- (2-28) This value represents a weight or a percentage depending on the configuration of the ERROR TYPE parameter. If it is weight, it is configured in the same units as the display (d , d^2) and the limit is the capacity of the scale. If is configured in percentage, the introduced value is set in resolution of tenths, the range will be 0 ... 1000 which represents 0% to 100.0%.
- (2-29) Digital output number. 0 indicates none (no assigned output).
- (2-30) Digital input number. 0 indicates none (no assigned input).
- (2-31) Pages or registers only available if a device with a 4th digital output relay is used

1.5.1.6 **Only read paged Section**

This section is formed by pages 100 to 199 and can be only read.

PAGE 100 (Only read)			
Address	N° bytes	Description	Value range
Tare value + generic indicator data			
28	2	Tare (High)	Software version "ABCDEFGH" Example:"1.00204" H digit is always 0x00
30	2	Tare (Low)	
32	1	Software version "A"	
33	1	Software version "B"	
34	1	Software version "C"	
35	1	Software version "D"	
36	1	Software version "E"	
37	1	Software version "F"	
38	1	Software version "G"	
39	1	Software version "H"	
40	2	Indicator serial number (High)	
42	2	Indicator serial number (Low)	

PAGE 101 (Only read)			
Address	N° bytes	Description	Value range
Checkweigher application data			
28	2	Last weighing (High) (3-3)	
30	2	Last weighing (Low)	
32	2	Weight status read	0: Empty (There is no weighings) 1: New weighing 2: Weighing read 3: Error during weighing
34	2	Present Weight status	0: OFF (3-1) 1: Rest 2: Phase 1 (Wait) 3: Phase 2 (Read) 4: Phase 3 (Display) 5: Error
36	2	Accumulation status	0: Disabled (3-2) 1: Closed 2: Opened
38	2	Number of Weighings	
40	2	Total (High)	
42	2	Total (Low)	

PAGE 102 (Only read)			
Address	N° bytes	Description	Value range
Checkweigher application data			
28	2	Last weighing x10 (High) (3-4)	
30	2	Last weighing x10 (Low)	
32	2	Weight status read	See table "M" (3-15)
34	2	Present Weight status	0: OFF (3-1) 1: Rest 2: Phase 1 (Wait) 3: Phase 2 (Read) 4: Phase 3 (Display) 5: Error
36	2	Input/Output Status digital rejection	See table "N" (3-16)

PAGE 103 (Only read)			
Address	N° bytes	Description	Value range
Dosing application data (1/2)			
28	2	Weight of last dosing (High) (3-8)	
30	2	Weight of last dosing (Low)	
32	2	Weight of last dosing x10 (High) (3-8)	
34	2	Weight of last dosing x10 (Low)	

36	1	Status of last Weight read	See table "3-K" (3-10)
37	1	Status of present weight	0: OFF (3-5) 1: OFFLINE 2: Rest 3: Pause 4: Error 5: Blocked 6: Ask weight 7: Initial phase 8: Gross dosing 9: Fine dosing 10: Final phase 11: Showing result 12: Waiting for stability 13: Cancelled 14: Rearm
38	2	Status of digital outputs used in dosing app.	See table "3-I" (3-6)
40	2	Status of digital inputs used in dosing app.	See table "3-J" (3-7)
42	2	Present Weight dosed (High) (3-9)	
44	2	Present Weight dosed (Low)	

PAGE 104 (Only read)			
Address	Nº bytes	Description	Value range
Dosing application data (2/2)			
28	2	Error code for dosing application	See table "3-L" (3-11)

PAGE 199 (Only read)			
Address	Nº bytes	Description	Value range
Indicator application data			
28	2	Data format version	See table "3-G"
30	2	Indicator status	See table "3-F"
32	2	Hardware version	See table "3-H"
34	2	Number of calibrations	
36	2	software calibration seal status	0: Opened 1: Closed (protected)

- (3-1) Status weighing shows OFF when the indicator is not configured in Check-weigher mode. *Error* status is shown when there is a failure on the weighing signal during reading time (phase 2).
- (3-2) Accumulation status is always 0 (disabled) if the parameter TOTAL of the checkweigher application is OFF.
- (3-3) It's the last result of the Check-weigher mode. It's necessary to read the weighing status while the weighing to know if the weighing is valid.
- (3-4) It's the last result of the Check-weigher mode with resolution x10. It's necessary to read together with the weighing status (register P102/32) to know if the weighing is valid.
- (3-5) OFF when the device is not configured in dosing mode and OFFLINE when is configured in dosing mode but is not in weighing mode.
- (3-6) This register shows the status of the digital outputs of the dosing application. See table "3-I" to see the assignment of each bit.
- (3-7) This register shows the status of the digital inputs of the dosing application. See table "3-J" to see the assignment of each bit.
- (3-8) The weight of the last dosing. It is necessary to read the status of the weighing (register 30064) at the same time as the weight to know if it is valid.
- (3-9) The indication of the dosed weight is only valid during the dosing process. When finished this value is reset.

- (3-10) Indicates if the value is new and its status. The two parameters are coded with 4 bits per parameter as indicated in table "3-K".
- (3-11) This error code is only valid if the dosing status (P103 / 37) is in error mode.
- (3-15) Indicates if the value is new and if the weighing result is within or outside the programmed ranges. See table "M" with meaning of each bit.
- (3-16) Indicates the status of the digital outputs of the checkweigher application and of the rejection detection input if configured.

Table "M"		
Last Weighing Status in Checkweigher		
Bit	Description	Value and meaning
0...7	Weighing status	0: Empty (There is no weighings) 1: New weighing 2: Weighing read 3: Error during weighing
8...11	Function result pass / fail	0: Empty (There is no weighings or checkweigher function not activated) 1: Correct weighing (within the margins) 2: Correct weighing (out of the margins) 3: Error during weighing
12...15	<i>Reserved</i>	

Table "N"	
Digital Input/Output Status Checkweigher	
Bit	Description
0	Rejection output
1	<i>Busy Output</i>
2	<i>Error Sync Output</i>
3	<i>Reserved</i>
4	<i>Reserved</i>
5	<i>Reserved</i>
6	<i>Reserved</i>
7	<i>Reserved</i>
8	<i>Input product rejection</i>
9	<i>Reserved</i>
10	<i>Reserved</i>
11	<i>Reserved</i>
12	<i>Reserved</i>
13	<i>Reserved</i>
14	<i>Reserved</i>
15	<i>Reserved</i>

Table "3-G"	
Parameter version	
Value	Meaning
0x0101	First version parameters PROFIBUS. Ver. SW SWIFT 1.0020
0x0102	Change on filter (Table "2-B"). SW.Ver.1.0040

* The calibration mode is determined by the position of the calibration switch in the moment that we enter

in the SETUP mode only if the introduced PIN is correct. If the switch position is changed when we are in the SETUP mode the calibration mode doesn't change.

** Shows that the device is in Remote mode due to a serial command instead than the keyboard.

Table "3-F"			
Bits used in Mode Register			
Bit	Description	Meaning	
		0	1
0	Remote mode	No	Yes
1	Present position of the calibration switch	Unprotected	Protected
2	Calibration mode*	Unprotected	Protected
3	Remoted access**	No	Yes
4	Software cal.switch position	Unprotected	Protected
5..15	Reserved (do not use)		

Table "3-H"		
Bits used in the hardware registration		
Bit	Description	Meaning
0	RS485 terminator	0: Not in built 1: In built
1	Analog output	0: Not in built 1: In built
2..6	Field buses	0: Anyone 1: PROFIBUS 2: PROFINET 5: ETHERNET/IP
7	Device Type	0: Standard 1: COM Version (without keyboard and display)
8...15	Reserved	All to zero

Table "3-L"

Table "3-I"	
Digital output dosing status	
Bit	Description
0	Gross
1	Fine
2	Active
3	Pause
4	Error
5	Relay A
6	Relay B
7	<i>Reserved</i>
8	<i>Reserved</i>
9	<i>Reserved</i>
10	<i>Reserved</i>
11	<i>Reserved</i>
12	<i>Reserved</i>
13	<i>Reserved</i>
14	<i>Reserved</i>
15	<i>Reserved</i>

Table "3-J"	
Digital input dosing status	
Bit	Description
0	Start
1	Pause
2	Cancel
3	Continue
4	<i>Blocked</i>
5	<i>Reserved</i>
6	<i>Reserved</i>
7	<i>Reserved</i>
8	<i>Reserved</i>
9	<i>Reserved</i>
10	<i>Reserved</i>
11	<i>Reserved</i>
12	<i>Reserved</i>
13	<i>Reserved</i>
14	<i>Reserved</i>
15	<i>Reserved</i>

Dosing application error code	
Code	Error
0	No error
1	Final weight too high
2	Target weight to dose too low
3	Not enough material for dosing
4	Configuration error
5	Dosing out of margins
6	Lack of material
7	Scale error: signal > max. range
8	Scale error: signal < min. range
9	Scale error: Error Ref
10	Scale error: ADC error
11	Scale error: ADC Fault

Table "3-K"			
Last weight dosed status			
Bits 4 to 7 (high nibble)		Bits 0 to 3 (low nibble)	
0x0	0: Empty (No weight has been done)	0x0	0: Empty (No weight has been done)
0x1	Correct weighing	0x1	1: New weighing
0x2	Weighing out of margins	0x2	2: Weighing read